1.Power Button:

Press and release the power button, then the unit will continue working for the next 10 seconds.

2.Light Indicator:

If the light indicator turns on, please replace the batteries.

Specification:

Fits any door:40-70mm (1.57"-2.76") thick

Fits any barrel hole: 14-22mm Sensor: 0.3 Mega Pixel CMOS LCD screen: 3.5" TFT Power source: 4 AA Batteries Size: 135(W)x85(H)x24.5(D)mm

Weight: 350g

Digital Door Viewer User Manual



Attention:

- 1.Please read the instruction manual before use.
- 2.DO NOT disassemble the camera or the mainbody.
- 3. Handle with care.
- 4.Please unscrew both screws from the bottom of the digital door viewer, take out the holding plate and take off the paster cover on it and prepare to install.




Battery:

Dispose the used batteries appropriately, DO NOT bury or burn the batteries and keep them away from children. DO NOT swallow. DO NOT re-charge or disassemble the

Package Contents:

⑤Holding plate

7Camera

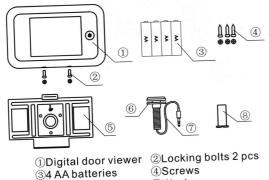

6Washer

Before installation:

Prior to mounting the peephole viewer, please make sure you have installed the batteries included.

- 1. Replace the existing door viewer or drill a 14mm hole in the door at eye level. Insert the camera from the outside while inserting the washer between the back of the lens and the door. Make sure that the arrow mark on front of the camera points upwards.
- 2. Fit the holding plate over the end of the lens then SCIEW the locking barrel on to the threaded part of the camera and tighten, this will hold the plate to the door. You can then secure the plate with 2 or 3 screws (provided). Make sure that the arrow on the plate points upwards.
- 3. The wire of camera should be connected to the SOCKet in the back of the digital door viewer, excess wire should be attached behind the small hook.
- 4. Hook the digital door viewer over the bracket at the top of the locking plate and secure with two small bolts through the holes in the bottom of the digital door viewer case.

